


READ BEFORE UNPLUGGING!!!!

TO UNPLUG:

- 1. Turn off BOTH switches!**
- 2. Hold onto the plug not the cord to remove the plugs or plug from the outlet.**

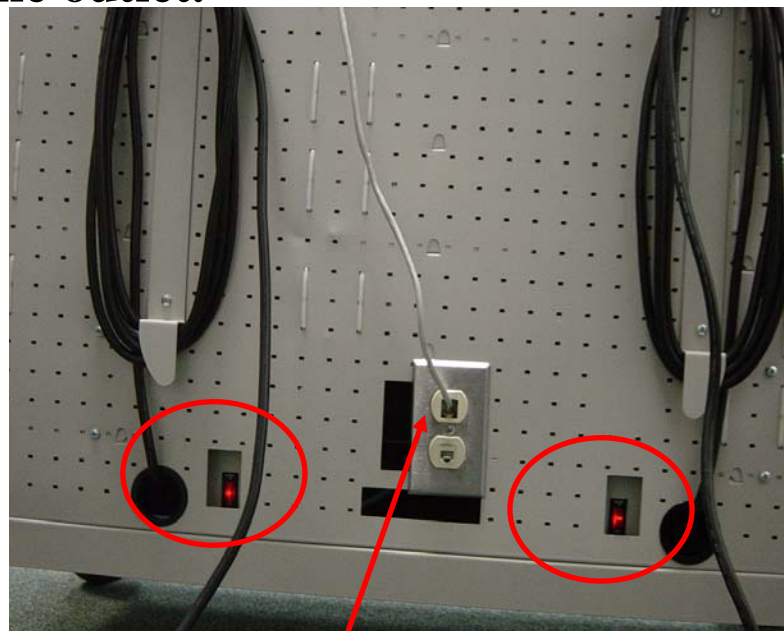

Switch 1

Switch 2

- 3. NEVER unplug the network cable from the back of the cart!!**
- 4. Use caution when moving the cart. Do not scrape the back of the cart against anything that will rip out the network cable or bend the metal cord holders located on the back of the cart.**